



HOW TO LOCATE DECAL OF ARROW, LOCK & FREE

ASSEMBLE HANDLE TO BASE WHEN BRAND NAME IS IN AN UPRIGHT POSITION AND WITH THE BASE TURNED SO THAT THE WORDS "MADE IN U.S.A." ARE TO THE LEFT. SEE FIG. 1. THE BUMP ON HANDLE THAT IS DIRECTLY ABOVE THE NAME ON FRONT OF HANDLE IS THE ONE THAT THE ARROW MUST BE MOUNTED. PLACE THE WORD "LOCK" ON FLANGE OF BASE AS NEAR THE ARROW AS IS PRACTICAL. SEE FIG. 1.

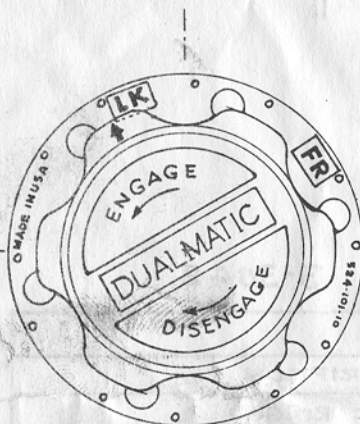

IN LOCK POSITION
FIG. 1

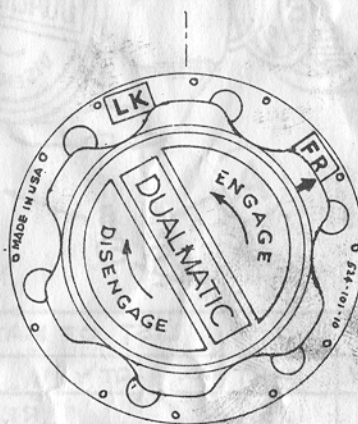

IN FREE POSITION
FIG. 2


TURN HANDLE TO DISENGAGE AND PLACE THE WORD "FREE" ON THE FLANGE AS NEAR AS POSSIBLE TO LINE UP WITH THE ARROW ON HANDLE. SEE FIG. 2.

THESE DECALS ARE INTENDED TO BE AN ADDED VISUAL AID AND DOES NOT REDUCE THE NEED FOR USING THE BUILT IN STOPS AND SPRING LOADED DETENTS TO DETERMINE WHEN THE HUB IS FULLY ENGAGED OR DISENGAGED.

ALWAYS TURN THE HANDLE FULLY UNTIL THE STOP IS FELT.

TURN HANDLE BY HAND ONLY. DO NOT USE FORCE.

FREE WHEELING HUB

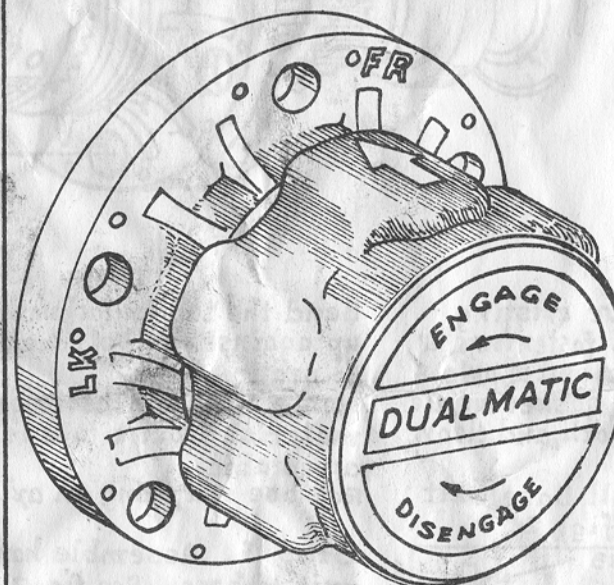

INSTRUCTIONS & PARTS LIST